

**USB-1801(H)**

**USB Extender User Manual**

Thanks for buying our products! Insure you use this product rightly, please read clearly this instruction before you use it.

## **I. Product Introduction.**

This product includes a Sender (USB extender sender) and a Receiver (USB extender receiver). It can extend USB port max 100 meters from computer through a single CAT5E cable. This product can be widely used in computer, education, bank, and industry.

USB-1801H is with DC5V/1A external power adaptor for receiver part in the package, but USB-1801 is without power adaptor.

## **II. Technical Specification**

Size	75 mm X 60mm X 25mm
Weight	0.2kg
Extend distance	70m/200 m
Cable Type	UTP CAT5, CAT5E, CAT6, UTP CAT5E is recommended
USB Standard	USB1.1 and compatible
Connector	USB A type, USB B type, RJ45
System	Windows , Unix, Linux

External power	DC5V/1A (For USB-1801H only)
Drivers	NO
Receiver Current Drawn	5V 10mA
Working temperature	-25~75°C
Relative humidity	0~95% (non-condensing)


### **III. Packing Instruction**

When you open the packing, you will find:

- 1, Sender: 1pc
- 2, Receiver: 1pc
3. DC 5V/1A power adaptor: 1pc (For USB-1801H)
- 4, USB Link cable (male to male) 1 meter
- 5, User guide: 1pc
- 6, Guarantee card: 1pc

### **IV. Installation**

Below is typical application.

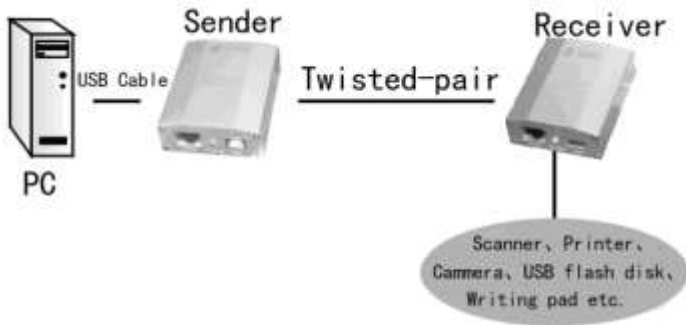

#### **V. Installation step:**

- 1, Make CAT5E cable, the CAT5E cable sequence must be: Orange-white(1),Orange(2),green-white(3),blue(4),blue-white (5)green(6),brown-white(7),brown(8).
- 2, Connect one head of CAT5E cable to RJ45 port of Sender, and the other to RJ45 port of Receiver.
- 3, Connect the USB devices to USB port of receiver, Power on the USB devices if need.
- 4, Connect the USB port of Sender to the USB port of computer with the USB cable provided in the package.

#### **VI. Notes:**

- 1, Support USB1.1 or compatible equipment.

2, CAT5e cable must be good enough.

## **VII. Trouble shooting**

S/N	Problem	Solution
1	Remote green LED is not lighting on	1, Check if the connection of sender and receiver tight or not 2, Check the cat5 cable sequence if correct
2	Remote USB device is not working	1, UTP cable is not well connected 2, Check if remote USB device need external power or not 3, Re-plug the USB cable between sender and PC.

## **VIII. Repair and service**

1, Promises:

- . One year guarantee of free repair service.
- . Provide lifetime repair service.

Problem caused by man-made reason, not included in one year free guarantee.

2. Warranty Card

Product model	
Machine number	
Purchase date	
Invoice Number:	
Buyer name, phone and fax	
Buyer E-Mail	
Product failure symptom	